


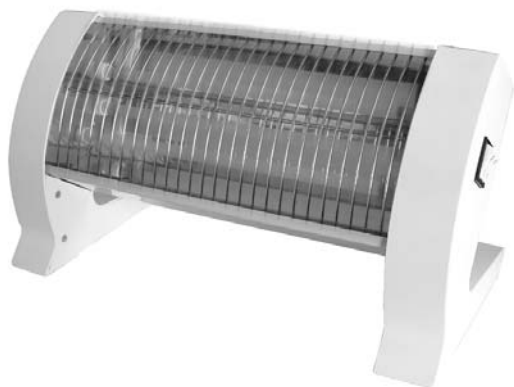

**QUARTZ HEATER
MOD. CREOLA Q2
MOD. CREOLA Q3**

IMPORTANT INSTRUCTIONS


- Read all instructions before using this heater.
- Ensure that the voltage on the rating plate is the same as in your home.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 0.9M from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use. Never pull or yank on the cord or the appliance. To disconnect heater, turn control to OFF, grasp plug and remove it from outlet.
- Do not use the unit in enclosed spaces such as inside cabinets or walls in order to defrost pipes or prevent pipes from freezing.
- Do not plug heater into loose-fitting or worn out electrical outlets.
- Do not wash with water, or touch with wet hands.
- Do not cover with clothing or place alongside inflammable objects such as cushions, newspapers or curtains etc.
- The fireguard are hot during operation, do not touch the heater while it is operation.
- Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical mechanical adjustment, or repair to avoid a hazard.
- Do not use outdoors.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool. Never locate heater where it may fall into a bathtub or other water container. If the heater does become wet, unplug it from the wall receptacle before touching it, as a wet heater may create an electrical shock hazard even if the heater is turned off.
- The heater must not be located immediately below a socket-outlet.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from trafficked area and where it will not be tripped over or stepped on.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any opening as this may cause an electric shock or fire, or damage the heater.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Do not use this heater as an integral part of any life support or equipment protection system, where a functional failure or misapplication of the heater could jeopardize the people or things being protected.
- Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Avoid using heater while sleeping.
- To prevent electrical overload and blown fuses, be sure that no other appliances are plugged into the same outlet.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire.

- Always place the appliance on a flat, stable surface. The appliance will not work if it is not resting properly on the floor.
- Always place the appliance in the upright position.
- **WARNING IN ORDER TO AVOID OVERHEATING, DO NOT COVER THE HEATER.**

DESCRIPTION

Main elements

1. Heat Element
2. Side Panel
3. Double Rocker Switches
4. Fireguard
5. Reflector
6. Auto cut-off switch

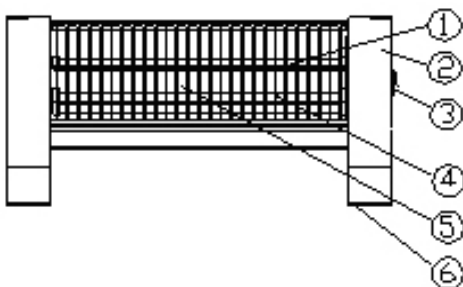

Operation

- This heater is intended for use on a flat, stable surface, such as a floor, tabletop, shelf, or desk in a location where the fireguard openings won't be obstructed. Keep all combustible material such as furniture, pillows, paper, clothes and curtains at least 3 feet (0.9m) away from the heater. Do not use in wet or moist locations, like bathrooms or laundry areas, or in areas where paint or other flammable or volatile liquids are used or stored.

CAUTION: Be sure no other appliances are plugged into the same circuit with this heater/ fan. A circuit overload could occur.

- Be sure the Switches are in the OFF position before plugging the unit in. Plug in to an AC outlet and switch on the appropriate quartz elements. The appliance has two switches that provide different settings. The quartz heating element will then glow in red color.
- Switch off the appliance if not used.
- The appliance can be moved to the other place by lift up the handle at the back side.

Depend on different models, they provides different powers when turn on the switches.

MOD. CREOLA Q2 (2 quartz elements)

- Switch 1 : 600W (I) heater on
- Switch 2: 600W (II) heaters on
- Switch 1 + 2: 600W (I) + 600W (II) heaters on

MOD. CREOLA Q3 (3 quartz elements)

- Switch 1: 500W (I) heater on
- Switch 2: 500W (II) +500W (III) heaters on
- Switch 1 + 2 : All heaters on

SPECIAL FEATURES

- The Motion Off Detection Feature will cut the power if the unit falls over in any direction or is lift (such as if you move it to another part of the room). The Tip-Over Switch will cut the power if the unit is knocked over forward or backward (for example, if a pet accidentally tips it over). Both are controlled by the Tip Over Switch on the bottom of the unit. Do not attempt to defeat this safety feature.

CARE AND CLEANING

- Always turn the unit Off, unplug disconnect the cord from the outlet, and allow the heater to cool completely before cleaning. To clean the exterior, use a soft dry cloth to wipe the outside surfaces. Do not use abrasive or harsh cleaners. Dry surfaces thoroughly before using the heater. Or, use a vacuum with a dusting brush attachment to clean away dust.

CAUTION: DO NOT immerse the heater in water or allow water to drip into the interior of the heater, as this could create an electric shock hazard.

- Store the heater in a dry area. Gather the power cord in loops and secure it with a twist tie. Don't let the power cord come in contact with sharp edges or get compressed by heavy objects. Portable electric heaters are designed for space heating as a supplementary heat source. They are not intended be the main source of heat.



www.argoclima.com
MADE IN CHINA